

Model 3159

High-Power Biconical Antenna

User Manual



 **ETS-LINDGREN**[™]
An ESCO Technologies Company

ETS-Lindgren L.P. reserves the right to make changes to any product described herein in order to improve function, design, or for any other reason. Nothing contained herein shall constitute ETS-Lindgren L.P. assuming any liability whatsoever arising out of the application or use of any product or circuit described herein. ETS-Lindgren L.P. does not convey any license under its patent rights or the rights of others.

© Copyright 2005–2008 by ETS-Lindgren L.P. All Rights Reserved. No part of this document may be copied by any means without written permission from ETS-Lindgren L.P.

Trademarks used in this document: The *ETS-Lindgren* logo is a trademark of ETS-Lindgren L.P.

Revision Record

MANUAL,3159 HIGH POWER BI-CONICAL ANT | Part #399775, Rev. A


Revision	Description	Date
A	Initial Release	November, 2005
B	Rebrand	November, 2008

Table of Contents

Notes, Cautions, and Warnings	v
1.0 Introduction	7
ETS-Lindgren Product Information Bulletin	8
2.0 Maintenance	9
Annual Calibration	9
Service Procedures	9
3.0 Specifications	11
Electrical Specifications	11
Physical Specifications	11
Model 3159 Antenna.....	11
Model 3159 Pedestal.....	11
4.0 Mounting Instructions	13
Mounting the Balun Unit	13
Mounting the Biconical Elements.....	14
5.0 Operation	15
Model 3159 Pedestal	15
Electrical Field Distribution	15
Calibration Data	16
Typical Antenna Factor at 6M.....	16
Calculated Forward Power at 3.5M	16
Appendix A: Warranty	19

This page intentionally left blank.

Notes, Cautions, and Warnings

	<p>Note: Denotes helpful information intended to provide tips for better use of the product.</p>
<p>CAUTION</p>	<p>Caution: Denotes a hazard. Failure to follow instructions could result in minor personal injury and/or property damage. Included text gives proper procedures.</p>
<p>WARNING</p>	<p>Warning: Denotes a hazard. Failure to follow instructions could result in SEVERE personal injury and/or property damage. Included text gives proper procedures.</p>



See the ETS-Lindgren *Product Information Bulletin* for safety, regulatory, and other product marking information.


This page intentionally left blank.

1.0 Introduction

The **ETS-Lindgren Model 3159 High-Power Biconical Antenna** is a broadband, linearly polarized biconical antenna with a 30 MHz to 100 MHz frequency range. This antenna exhibits a wide beamwidth and is designed to handle up to 10 kW input power for generating high electric field strength over a large uniform area.

The standard configuration for the Model 3159 consists of:

- Two open-end biconical elements
- High-power balun
- Pedestal with polarization control

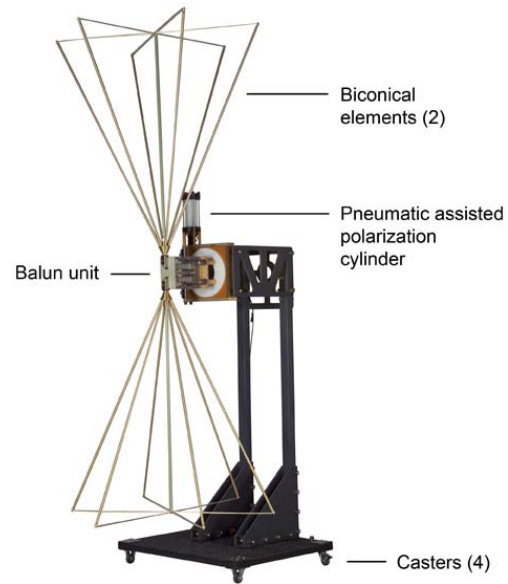

The pedestal allows antenna height and tilt-angle to be easily adjusted, plus features a wheeled base so that the antenna can be rolled out of the chamber and stored when not in use. Slots below the base allow for easy transport with a pallet jack or forklift. Horizontal and vertical polarization rotation is performed by a toggle switch on the back. The air valve assembly for pneumatic polarization is mounted onto the mast.

Unlike the top hat, capacitive-loaded, log periodic dipole antenna normally used in this frequency range, the phase center/source distance is the same for low and high frequencies. This ensures high field strength at frequencies as low as 30 MHz. The design of the Model 3159 takes advantage of the wide beamwidth feature of a biconical antenna. In addition, the optimized design provides low VSWR and high radiation efficiency.

ETS-Lindgren Product Information Bulletin

See the ETS-Lindgren *Product Information Bulletin* included with your shipment for the following:

- Warranty information
- Safety, regulatory, and other product marking information
- Steps to receive your shipment
- Steps to return a component for service
- ETS-Lindgren calibration service
- ETS-Lindgren contact information

2.0 Maintenance

CAUTION

Before performing any maintenance, follow the safety information in the ETS-Lindgren *Product Information Bulletin* included with your shipment.



Maintenance of the Model 3159 is limited to external components such as cables or connectors.

If you have any questions concerning maintenance, contact ETS-Lindgren Customer Service.

- Check all screws periodically and tighten any that are loose.
- Check the air filters weekly; more often, as necessary. The air used to feed the cylinder must be free of dirt and moisture. Never allow the air filters to fill with water.
- Lubricate all O-rings and pistons at 18-month intervals to prevent excessive wear. The air cylinder uses a special O-ring lubricant that can be purchased from any seal or bearing store or from ETS-Lindgren.

Annual Calibration

See the *Product Information Bulletin* included with your shipment for information on ETS-Lindgren calibration services.

Service Procedures

For the steps to return a system or system component to ETS-Lindgren for service, see the *Product Information Bulletin* included with your shipment.

This page intentionally left blank.

3.0 Specifications

Electrical Specifications

Frequency:	30 MHz–100 MHz
Input Impedance:	50 Ω
VSWR:	<ul style="list-style-type: none">• Typical—2:1• Maximum—4:1
Maximum RF Input Power:	10 kW
RF Connector:	1 5/8 in EIA flange

Physical Specifications

MODEL 3159 ANTENNA

Length:	3 m (9.8 ft)
Diameter:	1.04 m (3.4 ft)

MODEL 3159 PEDESTAL

Length:	232.4 cm (91.5 in)
Width:	160 cm (63 in)
Total Height With Antenna:	365.7 cm (144 in)
Air Pressure Required:	80–120 PSI

This page intentionally left blank.

4.0 Mounting Instructions

CAUTION

Before connecting any components, follow the safety information in the ETS-Lindgren *Product Information Bulletin* included with your shipment.



Do not cross thread connections or permanent damage could occur.


Mounting the Balun Unit



Due to the size of the Model 3159 biconical elements, you must mount the balun unit onto the pedestal prior to attaching the elements.

1. With the RF connector facing the pedestal, align the two threaded holes on the back of the balun with the holes on the boom.


Align threaded holes on balun
with holes on boom,
then insert knobs



2. Insert the hand mount knobs up and through the boom and into the threaded holes of the balun.
3. Turn the knobs until the balun is firmly attached to the boom, and then secure with nuts.

Mounting the Biconical Elements

1. Once the balun unit is securely connected to the boom, align the threads on one of the biconical elements with the receptacle on the end of the balun, and then turn the biconical element until it is firmly seated in the balun.

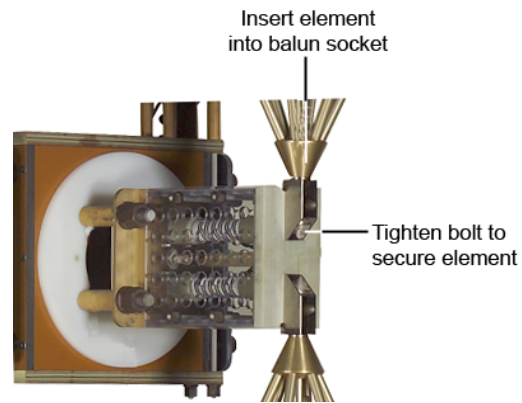

2. Tighten bolt to secure element.
3. Repeat steps for the remaining biconical element.
4. Once both elements are connected, attach the input cable to the connector on the bottom of the balun.

5.0 Operation

CAUTION

Before connecting any components or operating the Model 3159, follow the safety information in the ETS-Lindgren *Product Information Bulletin* included with your shipment.

The Model 3159 High-Power Biconical Antenna has a 4:1 Guanella balun for matching the impedance to the amplifier. The balun maintains a low operating temperature due to the efficient radiation pattern and high power design.

Model 3159 Pedestal

CAUTION

To prevent damage to the cables, you must disconnect the RF cables from the Model 3159 before polarization or movement of the boresight feature.


The Model 3159 pedestal has one air cylinder that controls the polarization movement of the antenna. The switch on the back of the pedestal toggles air control. Boresight is accomplished manually.

Electrical Field Distribution

The Model 3159 may be used for both horizontal and vertical polarization. It exhibits a dipole-like radiation pattern; for example, a toroidal shape with an omnidirectional pattern in the H-plane. In a low frequency range such as 30 MHz (wavelength $\lambda = 10$ m), the equipment under test (EUT) is in the near field of the antenna, allowing the antenna to behave as a field generator.

Calibration Data

TYPICAL ANTENNA FACTOR AT 6M

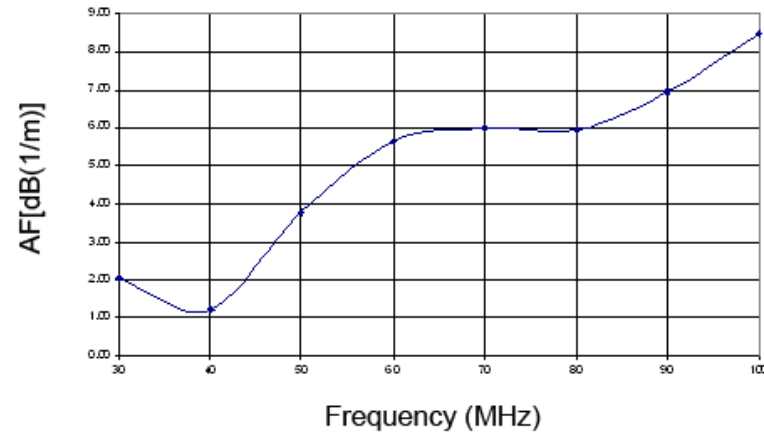


CALCULATED FORWARD POWER AT 3.5M

A calculation was used to derive the forward power data once the six-meter calibration was complete. The following equation was used to determine the power required to generate the desired field strength at a given distance when antenna factors are known:

$$\begin{aligned} P \text{ dB}(W) &= 20 \log 10 [E \text{ desired (V/m)}] \\ &+ 20 \log 10 (dm) \\ &- 20 \log 10 (fMHz) \\ &+ AF \text{ dB}(m - 1) + 15 \end{aligned}$$

With this equation you can calculate the forward power needed to generate 100 V/m at a given distance. Following is the performance for the Model 3159 at 3.5m:

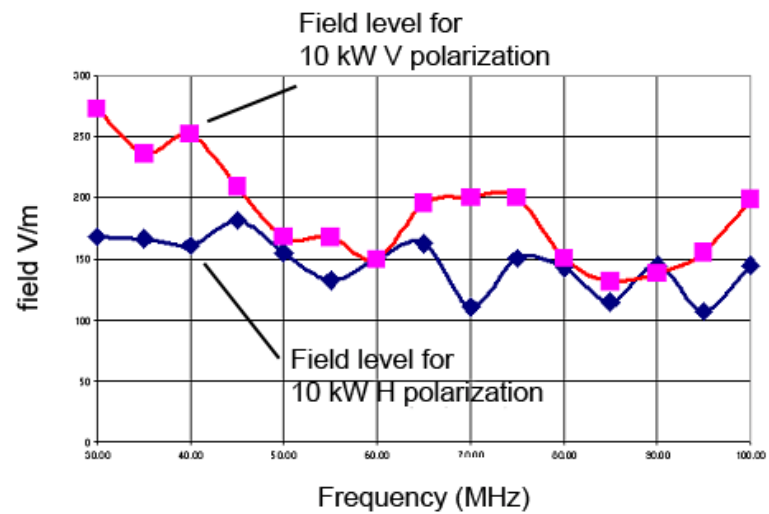

This page intentionally left blank.

Appendix A: Warranty



See the *Product Information Bulletin* included with your shipment for the complete ETS-Lindgren warranty for your Model 3159.

DURATION OF WARRANTIES FOR MODEL 3159

All product warranties, except the warranty of title, and all remedies for warranty failures are limited to two years.

Product Warranted	Duration of Warranty Period
Model 3159 High-Power Biconical Antenna	2 Years